

# CI-tronic<sup>™</sup> Reversing contactor Type RCI

## Features



- Compact modular design complete with heat sink
- DIN-rail mountable
- Built-in varistor protection
- Operational current up to 10 A (AC-3)
- Line voltage up to 480 V a.c.
- Built-in interlock
- Universal control voltage
- Burst firing (zero cross)
- LED status indicator
- IP 20 protection
- Problem-free specification according to industry standard
- Easy and quick installation
- EN 60947-4-2 and UL-C

## Description

RCI reversing contactors are designed for demanding forward/reverse control of threephase AC motors. The zero cross switching method ensures very fast and precise motor control and virtually eliminates EMC emission. The RCI reversing contactor is ideal where fast switching capability and long life are essential. Typical applications are conveyors, thread cutting machines, packaging lines and other applications where fast reversing capabilities are needed.

Selection guide	Operational voltage	Max. motor current	Max. motor power	Control voltages	Dimensions	Туре	Code no.
	24 - 480 V a.c.	10 A	4 kW / 5.5 HP	5-24 V d.c.	45 mm module	RCI 10	037N0044
24 - 480 V a	24 - 460 V a.C.	IUA	4 KW / 5.5 HP	24-230 V a.c. / d.c.			037N0043

## **Technical data**

## Output specifications

Operational current AC-3 (motor load)	10 A
AC 4 (motor load)	8 A
Motor size at	
208-240 V a.c. (50/60 Hz)	AC-3: 0.1 - 2.2 kW (0.18 - 3 HP)
	AC-4: 0.1 - 1.5 kW (0.18 - 2 HP)
400 - 480 V a.c. (50/60 Hz)	AC-3: 0.1 - 4 kW (0.18 - 5.5 HP)
	AC-4: 0.1 - 3 kW (0.18 - 4 HP)
Leakage current max.	1 mA
Operational current min.	10 mA
Semiconductor protection fusing	
Type 1 coordination	50 A gL / gG
Type 2 coordination	450 A <sup>2</sup> s

<u>Danfoss</u>

Reversing contactor, type RCI

## Technical data (continued)

## Thermal specification and environment

Power dissipation		
Continuous duty	2.0 W/A	
Intermittend duty	2.0 W/A x duty cycle	
Ambient temperature range	-5°C to 60°C	
Cooling method	Neutral convection	
Mounting	Vertical (± 30°)	
Storage temperature range	-20°C to 80°C	
Enclosure degree / pollution degree	IP 20/3	

## Insulation


Rated insulation voltage, U <sub>i</sub>	660 V a.c.	
Rated impulse withstand voltage, U <sub>imp</sub>	4 kV	
Installation category	III	

## Control circuit specifications

037N0044	037N0043
5 - 24 V d.c.	24 - 230 V a.c. / d.c.
4.25 V d.c.	20.4 V a.c. / d.c.
1.5 V d.c.	7.2 V a.c. / d.c.
25 mA at 4 V d.c.	6 mA / 1.5 VA at 24 V d.c.
½ cycle	1 cycle
30 ms / 80 ms	60 ms / 150 ms
Meets requirements of EN 60947-4-2	
	5 - 24 V d.c. 4.25 V d.c. 1.5 V d.c. 25 mA at 4 V d.c. ½ cycle 30 ms / 80 ms

## **Functional description**

When control circuit A1-A2 is ON, the motor will rotate forward. With control circuit A3-A4 ON the motor will rotate in reverse direction. If both control circuits are switched ON the motor will rotate in the direction determined by the circuit which was switched ON first. A delay time (interlock) between forward and reverse running is incorporated.

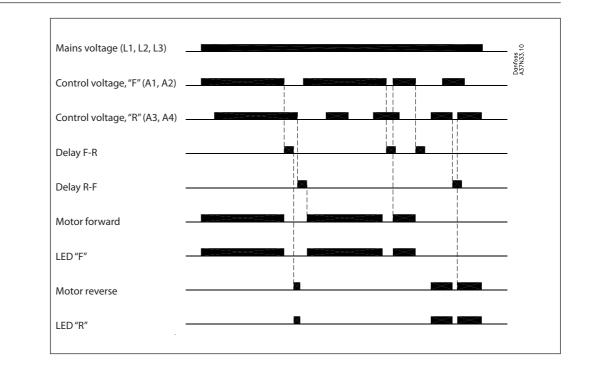


## Functional diagram



Reversing contactor, type RCI


## Wiring

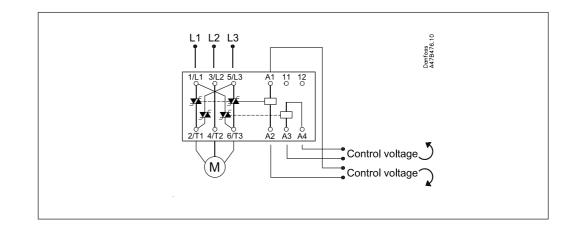

## Motor overload and short circuit protection

Motor full load current [A]	Danfoss CTI 25M/ CTI 25MB circuit breaker, code no.
0 - 0.16	047B3140
0.16 - 0.25	047B3141
0.25 - 0.4	047B3142
0.4 - 0.63	047B3143
0.63 - 1.0	047B3144
1.0 - 1.6	047B4145
1.6 - 2.5	047B3153
2.5 - 4.0	047B3154
4.0 - 6.3	047B3155
6.0 - 10.0	047B3156

## Dimensions

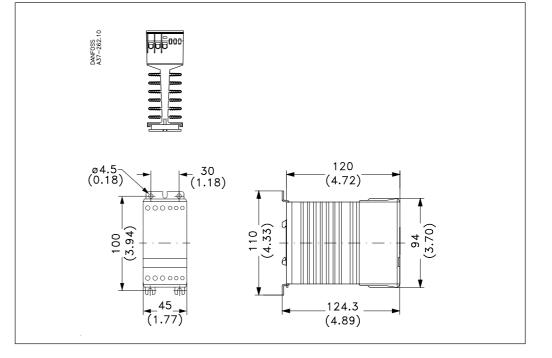


Jantos

## Reversing contactor, type RCI

## Mounting

The controller is designed for vertical mounting. If the controller is mounted horizontally the load current must be reduced by 50%. Controllers mounted side by side need no clearance. Controllers mounted vertically on top of another

need a clearance of minimum 80 mm (3.15 in.). Clearance between controller top and "ceiling" and between controller bottom and "floor" must be at least 30 mm (1.2 in.)

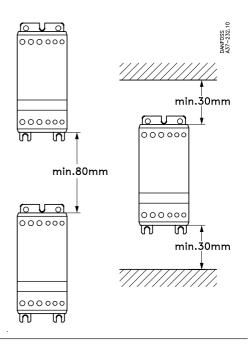

## Overheat protection

If required the controller can be protected against overheating by inserting a thermostat in the slot on the right-hand side of the controller. Order: UP 62 thermostat 037N0050

The thermostat is connected in series with the control circuit of the main contactor. When the temperature of the heat sink exceeds 100°C the main contactor will be swtiched OFF. A manual reset is necessary to restart this circuit. For wiring connections see application examples.

#### **Application examples**

Combined reversing contactor and soft starter

## Soft start & soft stop


A soft reversing of a motor can easily be achieved by connecting a reversing contactor to the soft starter.


The reversing contactor, type RCI, will determine the direction of rotation, forward or reverse and the soft starter, type MCI, will perform soft starting and soft stopping of a motor.

## Soft start only

If soft stop is not required, the application can be simplified by connecting the control circuit of the soft starter to the main terminals.

A delay of approx. 0.5 sec. between forward and reverse control signal must be allowed to avoid influence from the voltage generated by the motor during turn-off.

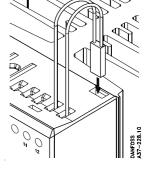

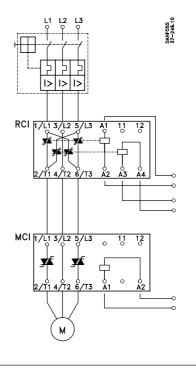

Danfoss A/S 07-07/ AC-DSL/mr

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.