



## Room Thermostat

**RAA41**

Adjustable for heating only **or** cooling only

---

**Room thermostat with manual changeover switch for heating or cooling systems**

**Two-position control**

**Switching voltage AC 24...250 V**

### Use

---

The RAA41 room thermostat is used in heating or cooling systems to maintain the selected room temperature.

Typical use:

- Residential buildings
- Light industrial buildings

In conjunction with

- zone valves
- thermal valves

### Functions

---

#### OFF

The front of the unit carries a selector with three positions for **Heating / OFF / Cooling**.

In the OFF position, the input voltage is physically separated from the output voltage.


#### Heating

If the room temperature falls below the selected setpoint, the heating contact will close (cooling contact open). If the room temperature exceeds the selected setpoint, the heating contact will open and the cooling contact will close but remains inactive because the selector is set to "Heating".

#### Cooling

Action reversed.

## Function diagrams

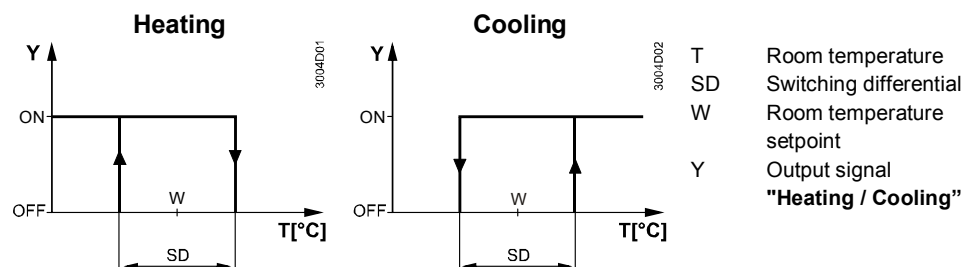

## Equipment combinations

Type of unit	Type reference	Data sheet <sup>*)</sup>
Motoric on/off actuator	<b>SFA21...</b>	4863
Thermal actuator (for radiator valve)	<b>STA21...</b>	4893
Thermal actuator (for small valve 2,5 mm)	<b>STP21...</b>	4878

<sup>\*)</sup> The documents can be downloaded from <http://siemens.com/bt/download>.

## Accessories

Description	Type reference
Adapter plate 120 x 120 mm for 4" x 4" conduit boxes	ARG70
Adapter plate 96 x 120 mm for 2" x 4" conduit boxes	ARG70.1
Adapter plate for surface wiring 112x130 mm	ARG70.2

## Technical design

Key features of the RAA41 room thermostat:

- Two-position control
- Manual switch for Heating / OFF / Cooling
- Gas-filled diaphragm

## Adjustments

The required temperature is selected by a setpoint adjuster on the front of the thermostat.


The setpoint setting range can be mechanically limited by means of setpoint limiter under the unit cover.

## Notes

### Mounting, installation and Commissioning

The room thermostat should be located where the air temperature can be sensed as accurately as possible, without getting adversely affected by direct solar radiation or other heat or refrigeration sources.

Mounting height is about 1.5 m above the floor.

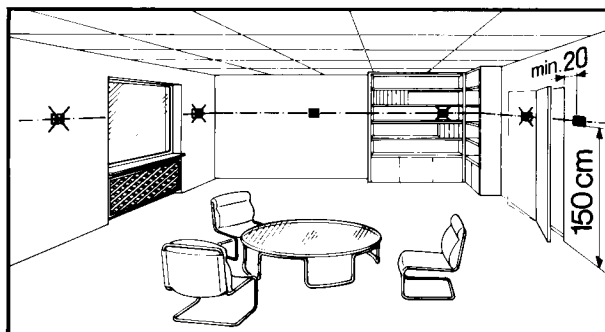

The unit can be fitted to most commercially available recessed conduit boxes or directly on the wall.

**AC 250 V**

Only authorised personnel may open the unit to perform service.

The unit must be isolated from the mains supply before opening.

When installing the unit, fix the baseplate first, then hook on the thermostat body and make the electrical connections. Then fit the cover and secure it (also refer to separate mounting instructions).

The thermostat must be mounted on a flat wall.

The local electrical regulations must be complied with.

If there are thermostatic radiator valves in the reference room, set them to their fully open position.

The room thermostat is maintenance-free.

The diaphragm is filled with environmentally friendly gas.

The thermostat housing is made of plastic.

**Maintenance****Mechanical design****Ordering**

<i>Typ (ASN)</i>	<i>Partnumber (SSN)</i>	<i>Description</i>
RAA41	S55770-T224	Room thermostat RAA41

**Disposal**

The devices are considered electronics devices for disposal in term of European Directive 2012/19/EU and may not be disposed of as domestic waste.


- Dispose of the device via the channels provided for this purpose
- Comply with all local and currently applicable laws and regulations.

**Technical data**

<b>Power supply</b>	Switching capacity	
	Voltage	AC 24...250 V
	Current	0.2...6(2.5) A
	Frequency	50 or 60 Hz
	Screw terminals for	2 x 1.5 mm <sup>2</sup> (min. 0.5 mm <sup>2</sup> )
<b>Operational data</b>	Switching differential SD	≤1 K
	Setpoint setting range	8...30 °C
<b>Environmental conditions</b>	Operation	To IEC 60721-3-3
	Climatic conditions	Class 3K5
	Temperature	0...50 °C
	Humidity	<95% r.h.
	Pollution degree	Normal, to EN 60730-1
	Transport / storage	To IEC 60721-3-2
<b>Industry standards</b>	Climatic conditions	Class 2K3 / 1K3
	Temperature	-20...50 °C
	Humidity	<95% r.h.
	Mechanical conditions	Class 2M2
	EU Conformity (CE)	CE1T3561xx <sup>*)</sup>
	RCM Conformity	CE1T3561en_C1 <sup>*)</sup>
	Safety standard	II to EN 60730-1
<b>Environmental compatibility</b>	Degree of protection of housing	IP30 to EN 60529
	The product environmental declaration CE1E3561 <sup>*)</sup> contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal).	
<b>Mechanical design</b>	Weight	0.14 kg
	Color	White, NCS S 0502-G (RAL 9003)

<sup>\*)</sup> The documents can be downloaded from <http://siemens.com/bt/download>.


## Connection diagrams

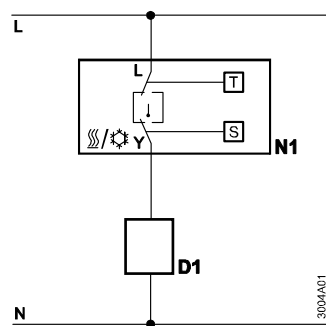


- D1 Zone valve or thermal valve
- L Switching voltage  
AC 24...250 V
- N1 Room thermostat
- S Selector for Heating / OFF / Cooling
- Y Control output "Heating" or "Cooling",  
AC 24...250 V
- N Neutral
- T Thermostat element (gas-fillet diaphragm)

## Dimensions

**Room thermostat**

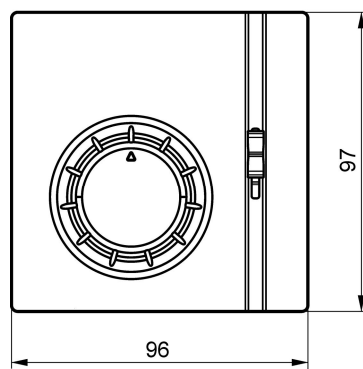

**Baseplate**

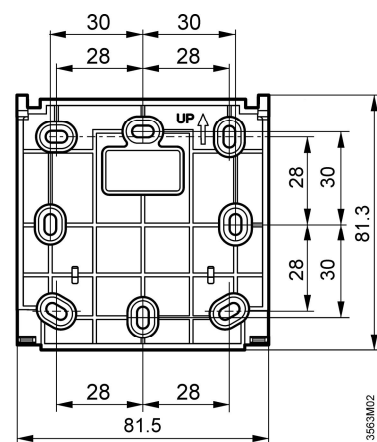

## Remarks

### Heating:

Because of the unavoidable self heating effects of the electrical current, any loads of more than 3 Amperes connected to the unit can influence the control behavior and temperature accuracy in a negative way.

### Cooling:

Because of the unavoidable self heating effects of the electrical current, any loads of more than 1 Amperes connected to the unit can influence the control behavior and temperature accuracy in a negative way.