


INSTALLATION AND OPERATING INSTRUCTIONS TF 22 REMOTE REGULATOR

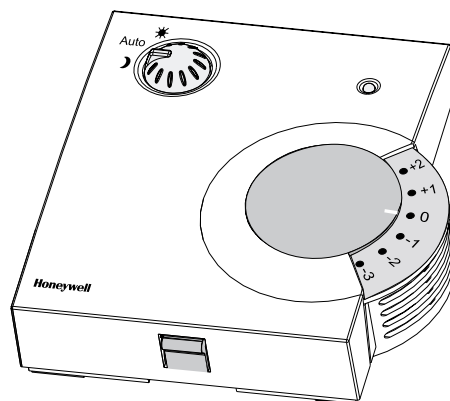

DESCRIPTION

The TF 22 remote regulator is a temperature controller equipped with operating mode switch, room temperature sensor, and error indicator LED. It is supported by the following control systems:

- MCR 35, 36, 40, 200
- DHC 23
- Excel 500

INSTALLATION OF THE TF 22

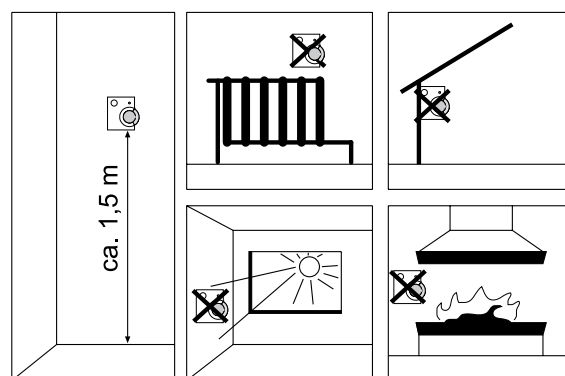


Figure 1: Locations for installation

1. Remove housing cover of the remote regulator.

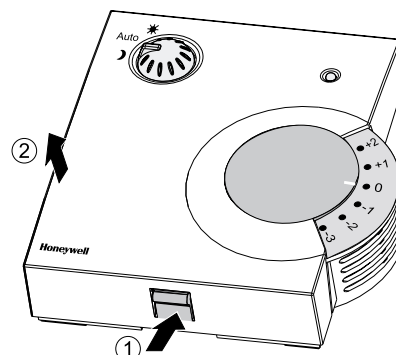


Figure 2: Removing housing cover

2. Screw remote regulator to the flush distribution box.

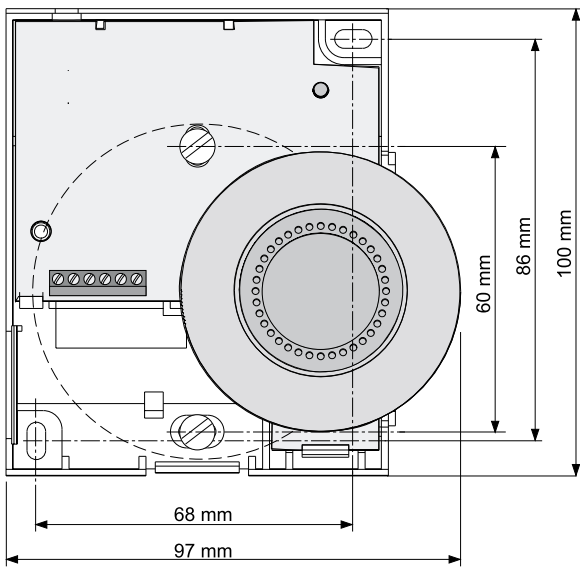


Figure 3: Dimensions of housing

3. Connect the cable coming from the controller.

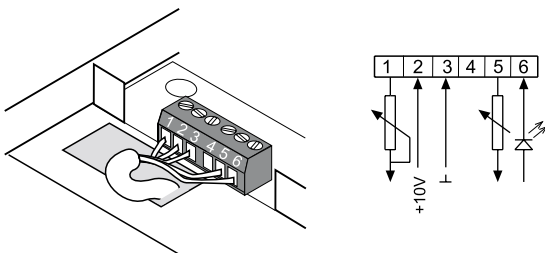


Figure 4: Wiring diagram

Wiring of the terminals:

1	Desired value	4	not used
2	+ 10 V	5	Room sensor
3	Earth	6	LED

4. Return cover to housing by placing top edge against back-plate and snap lower part of cover onto housing.

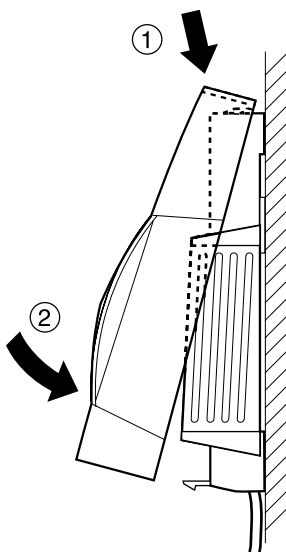


Figure 5: Replacing of housing cover

OPERATION AND FUNCTIONS

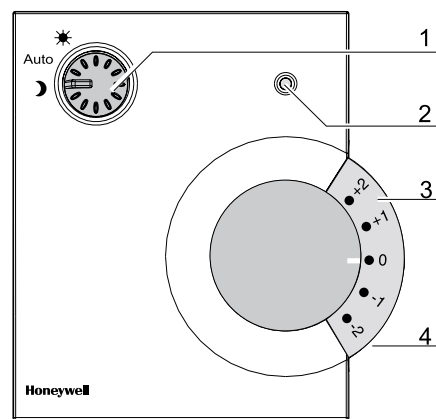


Figure 6: Operating devices and indicators

- 1 Operating mode switch
- 2 LED (error indicator)
- 3 Temperature selector with scale
- 4 Temperature sensor (to the side)

TF 22 in operation with systems MCR 35, 36, 40, 200, DHC 23 and EXCEL 500

Operating mode switch


The operating mode switch allows for the selection of three different functions:

Position	Operating mode	Function
Auto	Automatic	Heating is controlled by timer.
☀	Daytime	Only desired value for day applies.
☾	Switch-off	Heating is switched off. In the event of danger of frost, the heating pump and the burner are automatically switched on.

Note

The operating mode switch of the TF 22 does not in any way influence the warm water program.

Temperature selector




The desired value can be changed only if the operating mode switch is set to positions **Auto** or **☀** respectively.

Range: $-7...+7\text{ }^{\circ}\text{C}$

Mid-point position: $0\text{ }^{\circ}\text{C}$
(in relation to controller settings)

LED



Function in operation with MCR 200: The LED is on if the controller has detected an error.

The LED may also be used with other systems. The input voltage is $5 - 24\text{ V AC or DC}$.

TF 22 in operation with Excel 500 System

If the TF 22 is operated with the Excel 500 System, the temperature range and options of the operating mode switch can be chosen to suit your needs.

In such an installation, the feedback control system of the Excel System provides information on the current configuration of the switch.

TECHNICAL DATA

Sensor device:	NTC thermistor
Resistance:	20 k Ω at 25 °C
Temperature range:	-15...+40 °C
Dimensions (H×W×D):	103 × 98 × 28 mm
Installation:	Installation on wall or on standard 60 mm distribution box
Max. operating temperature / humidity:	0...50 °C / 5...95% humidity
Max. storage temperature / humidity:	-35...+70 °C / 5...95% humidity
Electric connection:	Terminals for max. 1.0 mm ² wire diameter
Protection class:	IP 30, DIN 40 050 or IEC 144

Technical data regarding the NTC thermistor:
see publication GE3R-1106.

Honeywell

Control Products

Honeywell AG
Böblinger Strasse 17
D-71101 Schönaich
Phone: (49) 7031 637 01
Fax: (49) 7031 637 493
<http://europe.hbc.honeywell.com>

Manufacturing location certified to **DIN EN**
ISO 9001

Subject to change without notice. Printed in Germany